




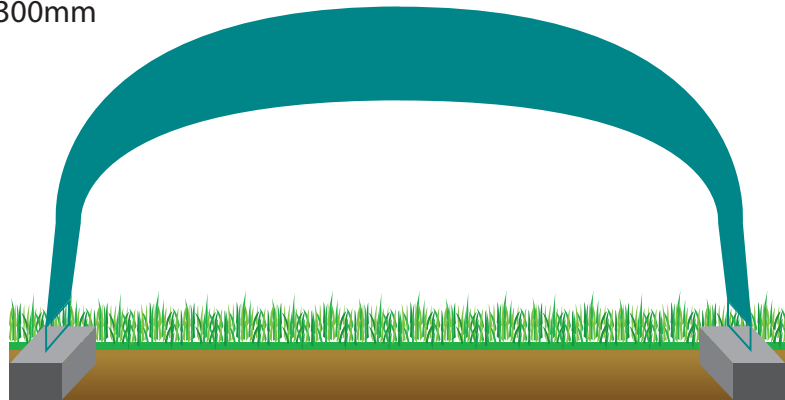


# Product: 2 Bay & 3 Bay Concrete Base Detail Spec Sheet

DryRainge can be installed on a number of surfaces, either directly onto the grass, or if preferred a full concrete base or strip foundations. When anchored to concrete DryRainge is secured with brackets directly to the concrete to secure it against wind and bad weather. The base should be prepared to the dimensions shown and should be allowed to cure for at least 7 days before installation of the DryRainge.

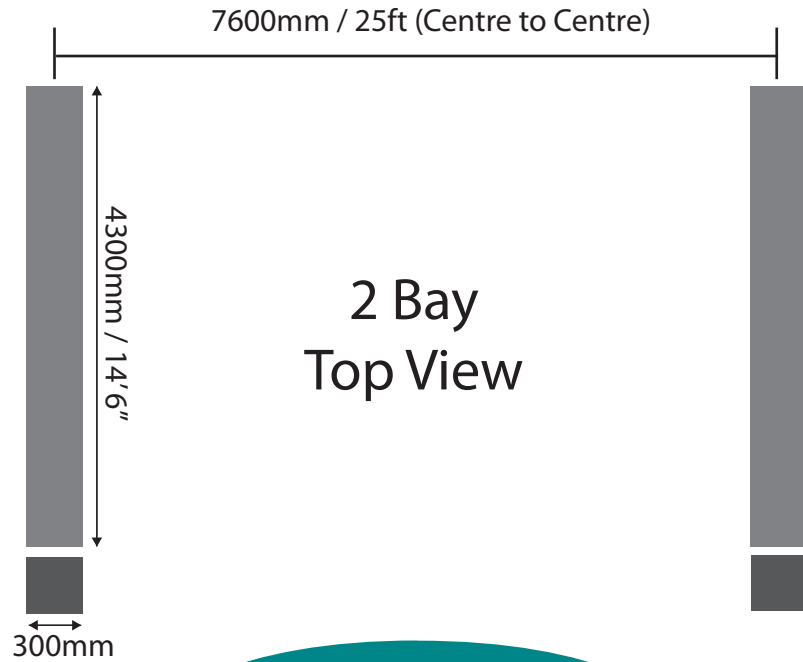

\* Below ground level Measurement

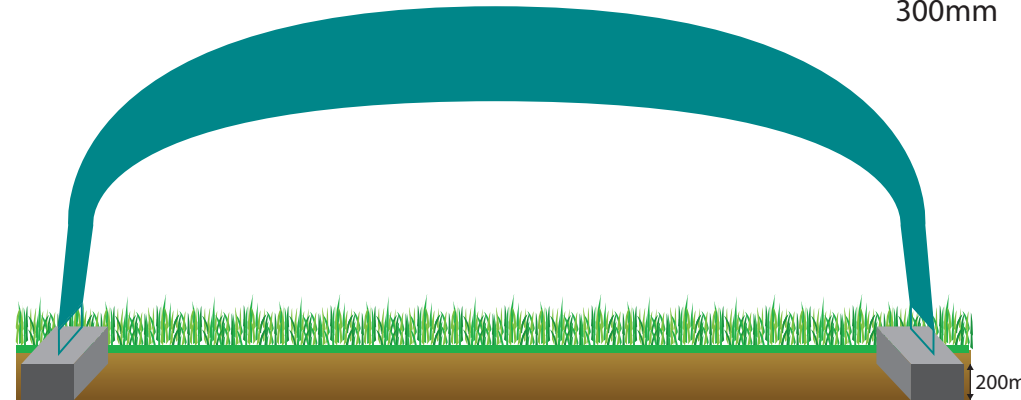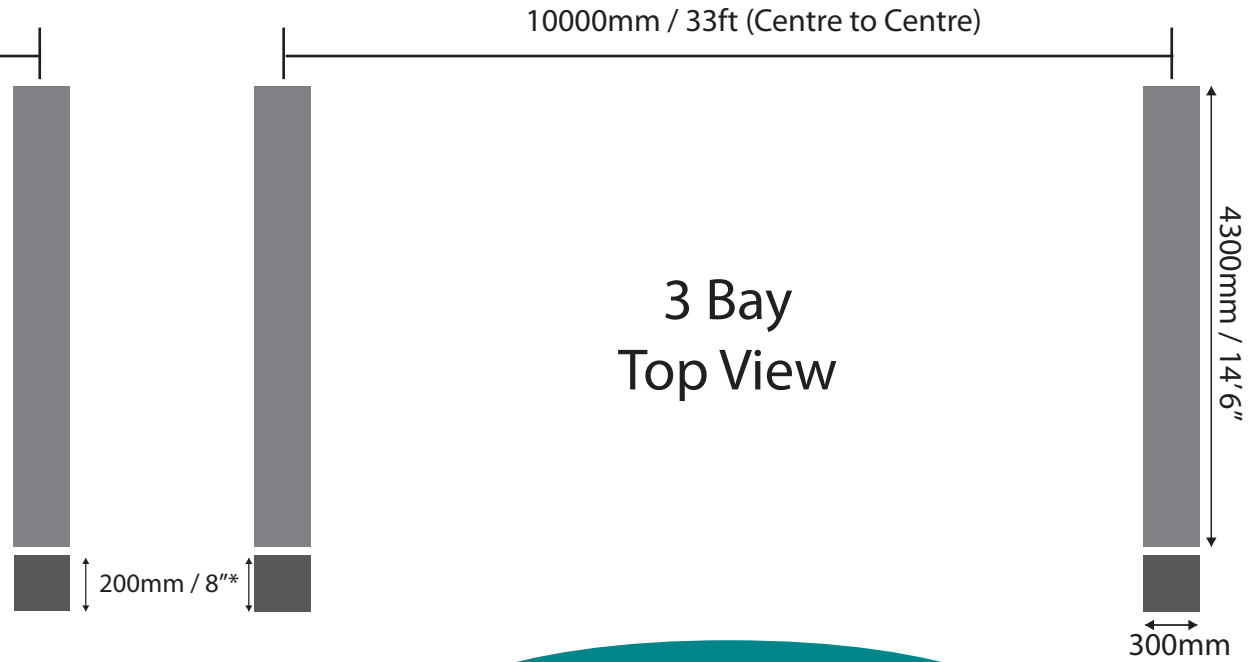

\* Below ground level Measurement